



Keyspan:Presentation Remote:Quick Start

Requirements:

- An available USB port
- Windows 98, 98Se, Me, 2000, XP or greater
- Mac OS 9.1 or greater, Mac OS X (10.1) or greater

Installation:

1. Insert battery in RF Remote

2. Connect the RF Receiver to an available USB port.

Windows: Windows will detect new hardware and install appropriate software via the New Hardware Wizard. Please have your Windows System CD-ROM ready in case the Wizard asks for it.

Macintosh: No software installation needed

3. Use the RF Remote Control

Using the Keyspan Presentation Remote:

The remote has 2 modes which are controlled via the Mode button (white button). When the Mode button is not showing a green light, the remote is in Standard mode. When the Mode button is lit green, then the remote is in Media mode. For details regarding these modes, please see the reverse side of this quick start

Using the Keyspan Presentation Remote's Laser Pointer:

To turn on the Laser Pointer, hold down the Laser Pointer Button (orange button) AND the Mode button (white button) simultaneously. The Mode Button will show a red light when the Laser is activated. To deactivate the laser again, hold down the Laser Pointer Button (orange button) until the Mode Button flashes rapidly.


Changing the Remote's ID / Trouble Shooting:

You can have several remotes within range of each other working simultaneously. To do this, each Remote must have a unique ID. To change your Remote's ID, press the Mode Button and Composite Switch (C) together until the Mode Button flashes green rapidly. Then using a paperclip, press the ID button on the receiver as shown below. To get the RF Receiver to learn the new ID, press the Composite Switch (C). Changing the Remote's ID is also useful if you are experiencing that your CPU no longer responds to the Remote.





Remote Details:

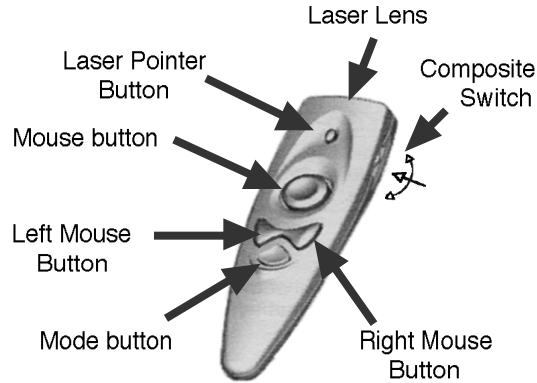

	Standard Mode	Media Mode (Windows Only)
Laser Pointer (P)	Laser Beam On/Off	Windows Media Player on
Mouse	Control Mouse Cursor	Up = Previous Track
		Down = Next Track
Left Mouse Button (L)	Left Mouse Button	Play/Pause toggle
Right Mouse Button (R)	Right Mouse Button	Stop
Mode Key (M)	Green LED off	Green LED on
Composite Switch (C)	Up = Line up	Up = Volume up
	Down = Line down	Down = Volume down
	Push = Click and drag	Push = Mute

Notes:

- Right Mouse Button** is not supported in Mac OS 9.x.
- Media Mode** is currently not supported in Mac OS.
- Laser pointer** turns off after 30 seconds of non-use.
- Media Mode** turns off after 20 seconds of non-use.
- DO NOT** point Laser pointer into eyes or stare into laser beam.

If You Need Help:

If you need help, please feel free to contact Keyspan via:

- web: <http://www.keyspan.com>
- fax: +1.510.222.0323
- info : +1.510.222.0131
- support : +1.510.222.8802

Keyspan, a division of InnoSys
3095 Richmond Pkwy Ste 207
Richmond, CA 94806